Technical information

Ti-941 EN

Mounting positions of the Actuator and Positioner

Edition: 2023-05

Mounting position of the Actuator

The standard mounting of the Actuator is perpendicular to the pipeline. This is the mounting position A. See Fig. A below.

Mounting positions B, C or D are available on request.
Always specify the mounting position of the Actuator when ordering a Valve with an installed Actuator.

The actuator is mounted in the position A if the position is not stated when ordering.

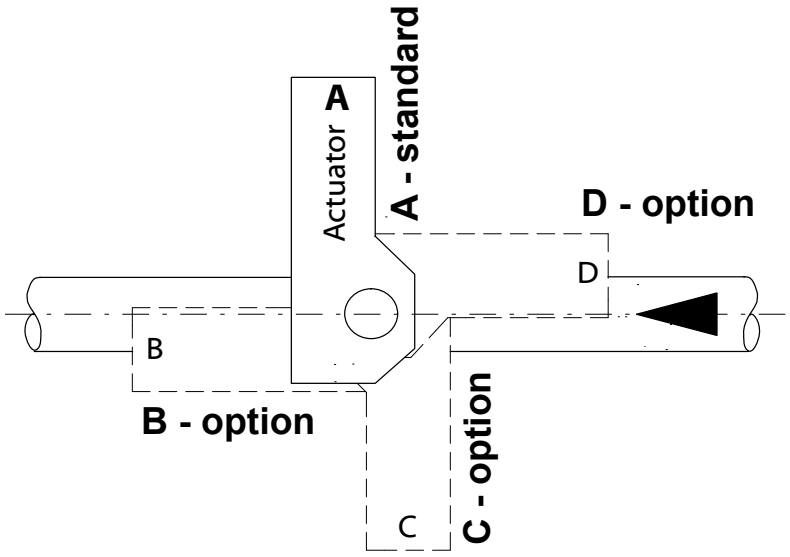


Fig.A *Mounting position of the Actuator.*
Mounting positions B, C or D are available on request.

Mounting positions of the Positioner at the next page

SUMMARY

- The standard mounting position of the Actuator is perpendicular to the pipeline mounting position A.
- Mounting position B, C or D for the Actuator is available on request (specify when ordering).
- Always specify mounting position of the Actuator when ordering.

Mounting positions of the Positioner

Somas standard mounting position of the Positioners - is perpendicular to the pipeline, position A in Fig.A below at this page. Please note the direction of the Display of the Positioner in this direction.

Mounting positions B, C or D are available on request. See Fig. B, C and D below. Please note the direction of the Display in these positions. Always specify the mounting position of the Positioner when ordering a Valve with an installed Positioner.

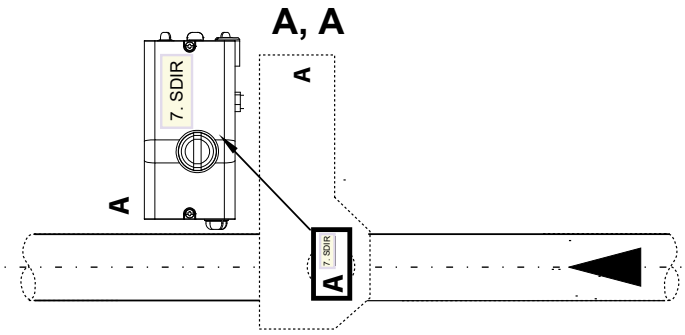


Fig.A *Mounting position **A** of the Positioner (and Actuator in position A). Please note the direction of the Display.*

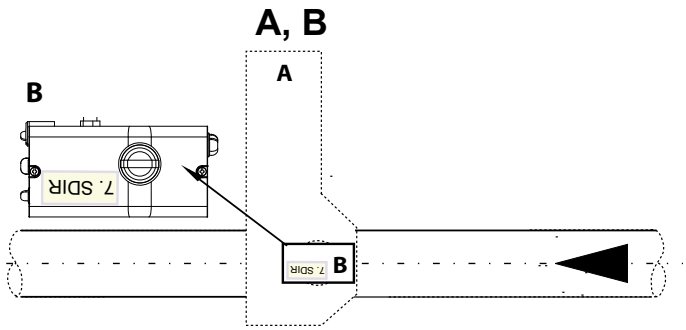


Fig.B *Mounting position **B** of the Positioner (and Actuator in position A). Please note the direction of the Display.*

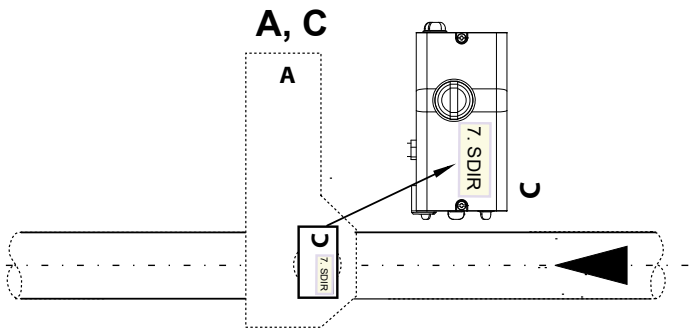


Fig.C *Mounting position **C** of the Positioner (and Actuator in position A). Please note the direction of the Display.*


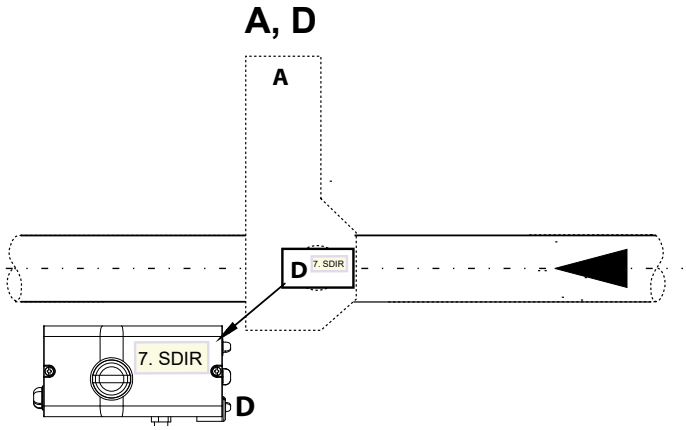


Fig.D *Mounting position **D** of the Positioner (and Actuator in position A). Please note the direction of the Display.*

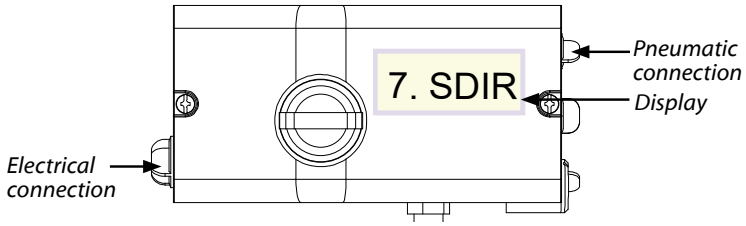

Typical drawing of a Positioner. Somas recommend that the electrical connection not is pointing upwards.

Somas.se LinkedIn

Head office:
Somas Instrument AB
Norrlandsvägen 26
SE-661 40 SÄFFLE
Sweden

Phone: +46 (0)533 69 17 00
E-mail: sales@somas.se
www.somas.se

SUMMARY

- The standard mounting position of the Positioner and the Actuator is perpendicular to the pipeline mounting position A, A.
- Mounting position B, C or D for the Positioner is available on request (specify when ordering).

SOMAS®